



## FM FREEFONE/MP3/FLASH DISK USER MANUAL

### **POWER ON**

Hold down the ON/OFF button for 5 seconds. You will see a Yellow indicator light come on. It is now ready for playing. Indicator light will continue to flash while in Power On Mode



### MODE SELECTION

The Xtatix FM Freefone MP3 / FM selector switch is located on the lower side of the left ear speaker. Simply push the pin back or forward to select MP3 or FM.



### PLAY MODE & STOP

Quick press OFF/ON button to start PLAY and STOP .



### PAUSE & RESUME

Quick press OFF/ON button.

**NOTE** The Xtatix FM Freefone will automatically Power Off if Play Mode is not restarted within 10 seconds.

### POWER OFF

Holding the ON/OFF button until the indicator light goes off or you hear a small bleep sound.

### VOLUME CONTROL

7. MP3 MODE: | << + VOL - >> | Button Control - with the Xtatix FM Freefone on your head hold the forward VOL button down to make the sound go Down (-), hold the back button down to make the sound go Up (+).



8. FM MODE: - VOL + Wheel Control - with the Xtatix FM Freefone on your head simply turn the wheel with a finger to adjust the volume Up (+) (anti-clockwise) or Down (-) (clockwise).



## EQUALIZER

To change the Equalizer effects quickly press and release the EQ while the audio is playing.





## REPEAT MODE

To repeat a track hold down the EQ button for a slow count of three and the audio will repeat at the immediate end of a track played.




## TRANSFERRING (Upload and Download) AUDIO FILES

Connect the USB cable to the FM Freefone on the headset next to the EQ button.




Connect the USB jack to an available USB Port on the computer (pc).

Switch On the FM Freefone and hear an indicator sound come from the computer, such as “ding dong” on Windows XP. Also I be a dialogue box appear above the Task Bar which is the right hand lower side of the monitor screen to say a “USB device has been connected” or the following;

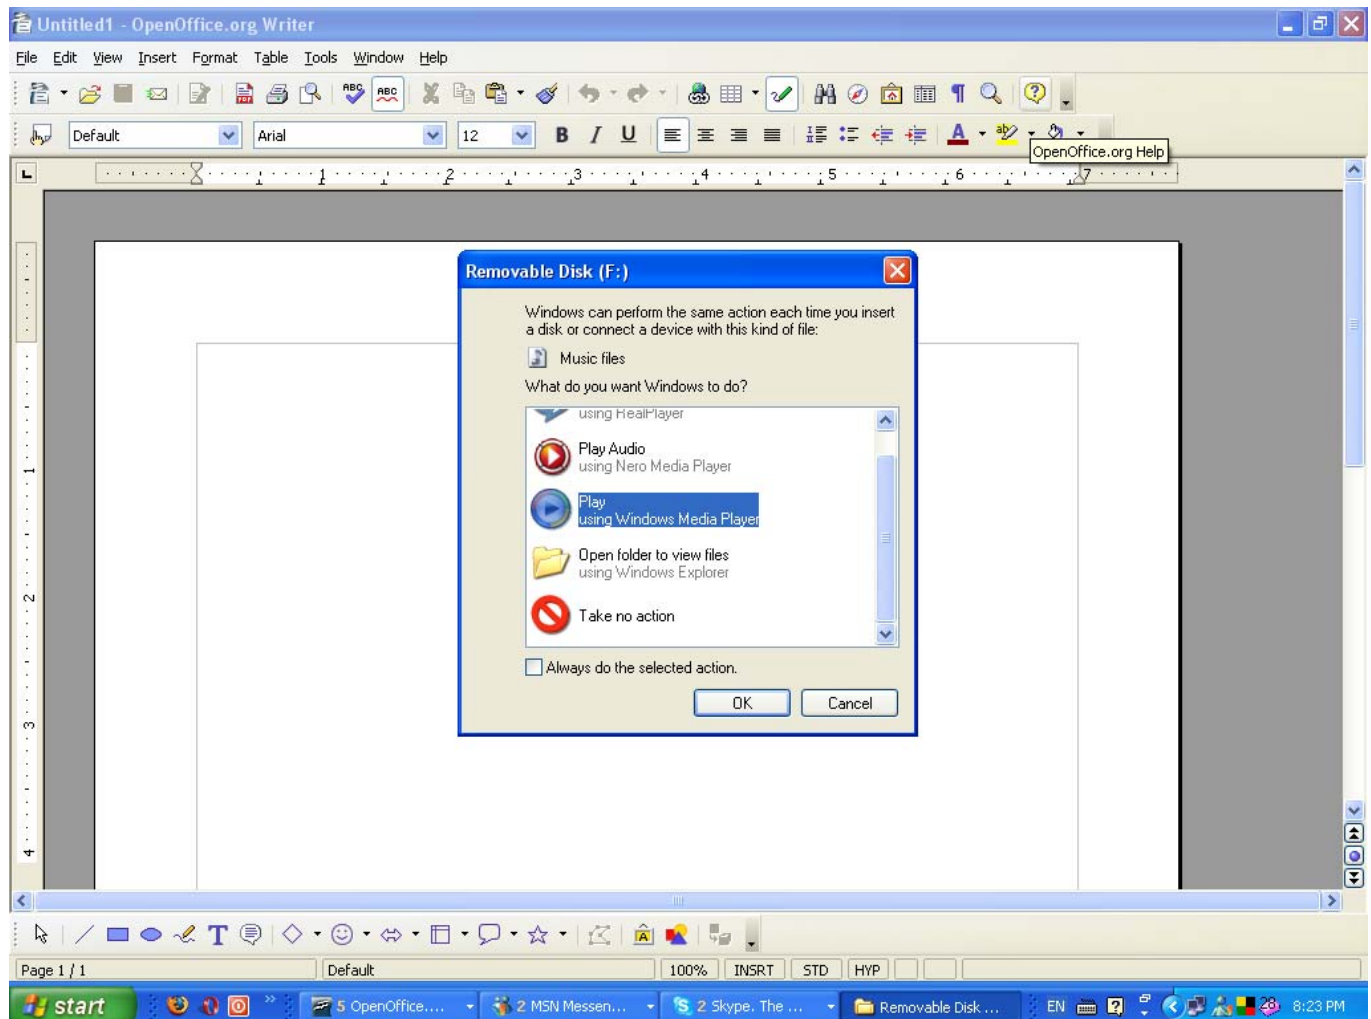

You can check that it is connected by going to “My Computer” and seeing a picture (Icon) of a device as follows (see Removable disk (F:);

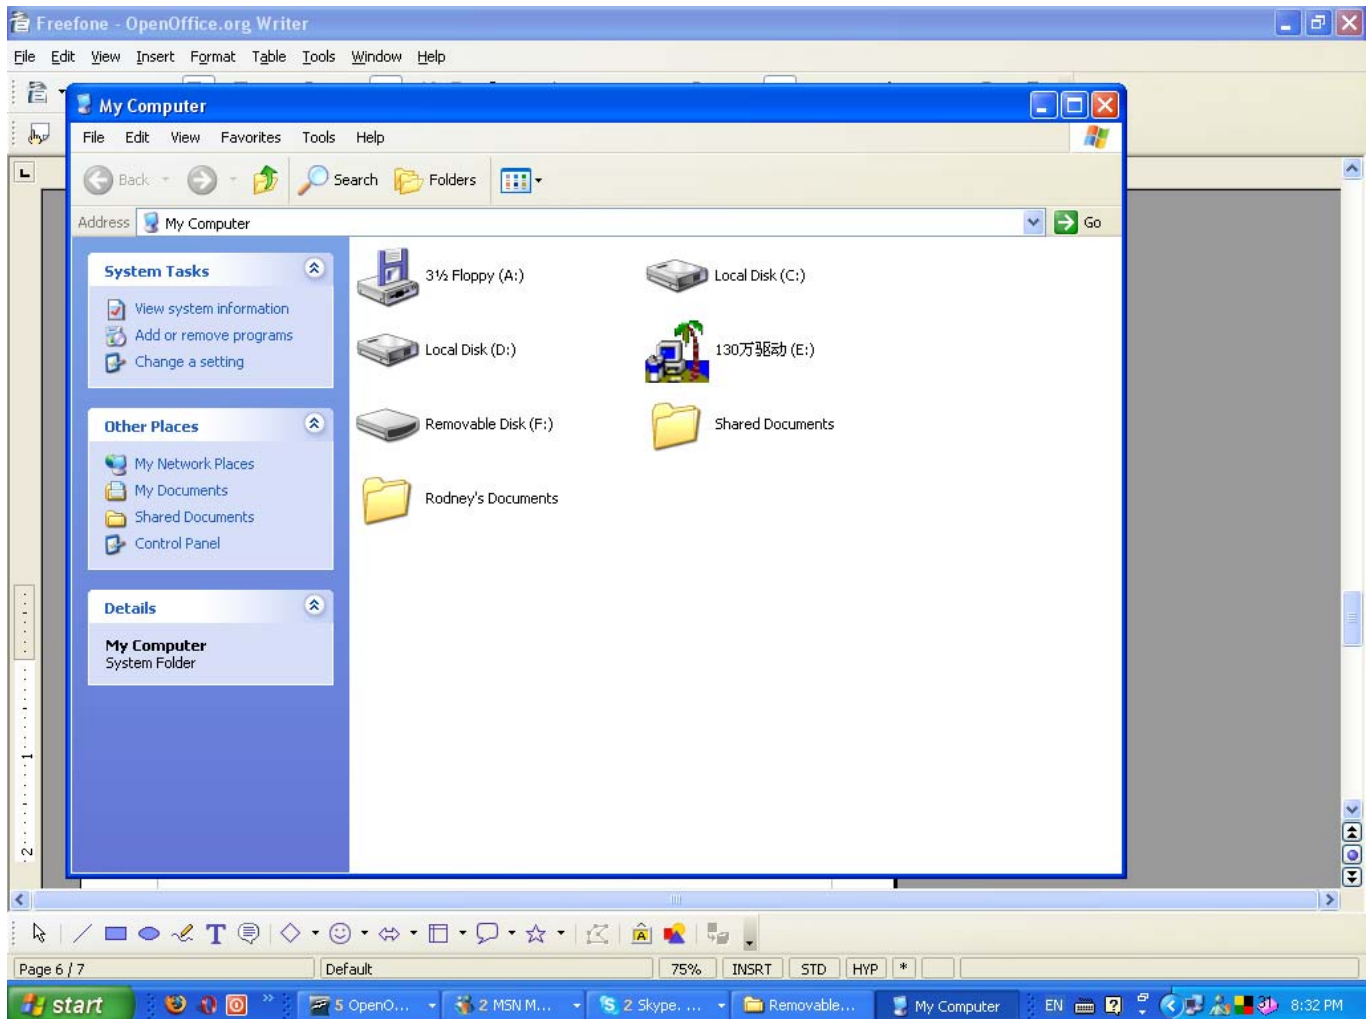

Open your Media Player (Windows Media Player, Realplayer, iTunes etc.) and press the Sync button and look for the instructions on how to install audio tracks on your FM Freefone MP3.

When the Sync (upload) is finished simply disconnect the FM Freefone from the pc and the headset. It is now ready for playing and listening.

Downloading: You can use the SYNC function to transfer Audio file to your Media Player

by clicking on “Shuffle” and then simply drag files to the location you want them. You can transfer other files such as documents, photos etc. in “My Computer” or in the “Save As” dialogue box in your software.

### DELETING AUDIO/OTHER FILES

1. Simply connect the FM Freefone to the computer via the USB Port and open “My Computer”.
1. Find the “Removable Disk” icon for Xtatix FM Freefone.
2. Double click on the icon.
3. Find and highlight the files you want to delete and hit the Delete button on the pc keyboard, or right click the mouse and click on “Delete”.

### FM RADIO MODE

1. With your Xtatix FM Freefone in POWER ON MP3 MODE switch to FM (see **MODE SELECTION**)
2. Press RUN once and a scan through the FM frequencies will start.



3. When you find your desired frequency press RUN again. That will store the frequency and later you can go back to that frequency by pressing RUN quickly. RES will restart the RUN/scan function.

To POWER OFF from the FM MODE switch back to MP3 MODE (see **MODE**



## SELECTION)

### LISTENING TO THE FM Freefone WITH EXTERNAL DEVICES

You can connect the FM Freefone to other devices such as a computer, DVD etc. via the USB Port on the device for audio playback.

### CHARGING THE FM Freefone (Internal) BATTERY

1. Connect the FM Freefone to an available USB Port.
2. Set the FM/MP3 switch to MP3.
3. You will see the Red LED Light come on indicating charging is happening. The Green LED light will come on, after approximately 3 hours, indicating that the charging cycle is completed.

To extend battery life it is best to fully discharge the battery before re-charging each time you wish to recharge. Battery life may be affected by volume, file compression, and other conditions.

### Customer Service

Please read the instructions below fully. If after reading and checking the instructions and you feel you still need to contact Customer Service do so via our website [www.xtatix.com](http://www.xtatix.com) or e-mail [inquiry@xtatix.com](mailto:inquiry@xtatix.com).

- Do not disconnect the FM Freefone from the pc during file transfer.
- The FM Freefone is preformatted. If you believe there is a format problem please consult a licensed, or reputable, computer service center technician, or the shop or business you purchased the FM Freefone from.
- The FM Freefone may experience performance problems in extremely hot, or cold, dusty, or humid environments.
- Do not drop the FM Freefone as the warranty only covers defects or flaws in the manufacture. Warranty does not cover damage as a result of accidents or user neglect.
- When the player has finished playing all audio tracks it will automatically “switch off.”
- The FM Freefone free phone will not function during the time of being connected to a computer occurs.
- To release the FM Freefone from the “Repeat One” mode remember to hold the “EQ” button for full 3 seconds

You can find more of the best & newest at  
[www.xtatix.com](http://www.xtatix.com)

