



Xtatix Pocket Candy Operation Guide

The Pocket Candy is a powerful digital audio tool. You can use it to listen to MP3, WMA and WAV files, store any file you want to take on the go (just like a regular USB drive), and as a voice recorder.

Notices

- Player must not be exposed to any water, including excessive humidity.
- Your Pocket Candy likes being in the same temperatures you do. Don't leave it in extreme cold or heat.
- Always try new battery before worrying about if your Pocket Candy is broken.
- Your Pocket Candy has a 256MB flash drive, thus it can store between 3-5 hours of audio content depending on file compression. If you want to store more audio content you will need to reduce the file compression. There is free software included in the Xtatix Software Bundle that can help you with this.
- Do not disconnect the player while files are being transferred.
- Do not drop or abuse the Pocket Candy.

Player Map



Basic Operations

Turn On/Off Player

When player is off hold down the Power button down for a few seconds to power up; when player is on hold the Power button down to power down.

Play/Pause Music

Press the Play button once to play; once playing press Play button again to pause.

Skip Tracks

While playing music tap the Mode button to either side to skip tracks.

FF/RW

While playing music hold the Mode button to either side to quickly FF or RW within a song.

Volume Adjustment

Hold down the Vol+ button to increase volume. Hold down the Vol- button to decrease volume.

Hold Button

The Hold button deactivates all buttons. If a button is pressed accidentally no effect will be had on the player. The Hold button is optimal when Pocket Candy is in a pocket.



Extended Functions

All extended functions commence by pressing in and holding the Mode button until the main menu appears.

Voice Recording

From the main menu select the icon REC by toggling the Mode button left or right. To arrive at the voice recording screen confirm selection by pressing in the Mode button. In voice record screen press the Play button to begin recording. To finish recording hold down the Play button until you see "saving..." appear on the screen.

Listening to Recording

From the main menu select the icon RPL by toggling the Mode button left or right. To arrive at the record listening screen confirm selection by pressing in the Mode button. If you have multiple recordings you can skip to the one you want to listen to by toggling the Mode button left or right. To play the recording you want to listen to press the Play button.

System Settings

Generally there is no reason to change the system settings, but if you get curious...

From the main menu select the icon SYS by toggling the Mode button left or right. To arrive at the system setting menu confirm selection by pressing in the Mode button. In the system setting menu you can adjust the backlight setting, the language settings, the play settings, and contrast. To configure any of these settings press in the Mode button when your selection is highlighted and toggle the mode button to change the setting. Then press the mode button again to exit the screen.



If you have any further questions about the functioning of your player please contact Xtatix support directly at help@xtatix.com. We try to respond to all inquiries within 1 business day.