


Xtatix Shooter Instruction Manual


©Xtatix LLC, 2005

WWW.XTATIX.COM

Precautions

1. Player is not meant to be operated in hot, cold, dusty, wet, or dry environments.
2. Avoid dropping the player.
3. The life span of the battery may vary accordingly dependent on the conditions under which the player is used, the manufacturer who produced the battery, and dates under which the battery was produced.
4. Please recharge the battery under following conditions:
 - A. When the battery icon shows as: 
 - B. The system turns off automatically and turns off again soon after it is turned on.
 - C. No reaction from the operation buttons.
 - D. When the display reads: Low Battery
5. Do not disconnect abruptly when the player is under format, upload, or download modes; this may cause player program malfunction.
6. When player is used as a removable hard disk, please save and output the files according to the correct file management procedures. Xtatix will not be responsible for any file loss due to improper operation.
7. Do not conduct recovery/upgrading operations when the battery is low.
8. The player is a precise high-tech electronic product. Please do not operate player without following proper instructions.

Shooter Diagram

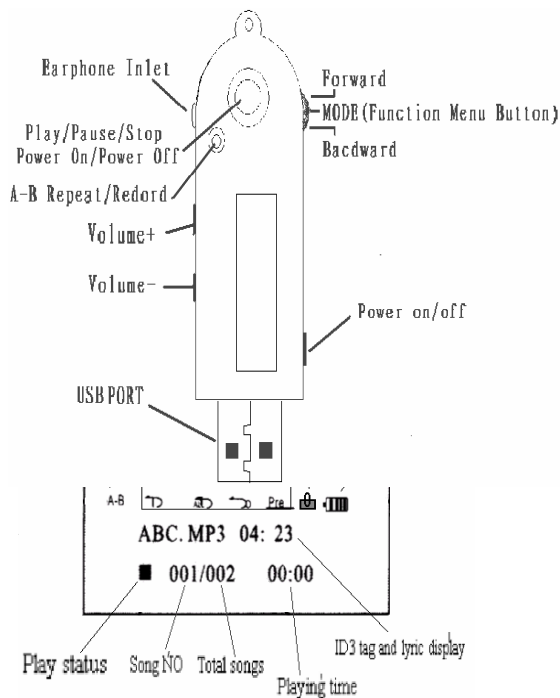

General Functions

To Turn Player On:


Make sure the POWER switch is positioned in the on position. The on position is obtained when the POWER switch is slid fully in its track towards the “◀MODE ▶” toggle/button. When POWER switch is in on position, hold down the PLAY button until background light turns on.

To Turn Player Off

Under status of Playing or Stop, press the PLAY button and hold until a “BYEBYE” is shown on the display; this signifies the player is set to turn off. You may also slide the POWER switch to the off position. The off position is obtained when the POWER switch is slid fully in its track away from the “◀MODE ▶” toggle/button.

Menu Operation

While in stop mode, press in the “◀MODE ▶” toggle/button to enter into menu mode.

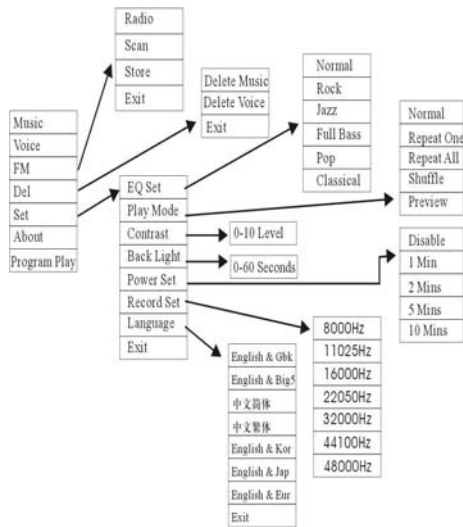

All the option choices of this player’s menu are listed in the table above. You can choose among the option choices by using the “◀/▶” toggle until desired choice is displayed. To select desired choice press the “◀MODE ▶” toggle/button in.

1. Music

Press in “◀MODE ▶” toggle/button and use the “◀/▶” toggle to select Music mode, then press the “PLAY” button to initiate playing.

2. Voice

Press in “◀MODE ▶” toggle/button and select Voice mode. Press the “PLAY” button to begin to play speech; press “A-B” button to setup repeat of segment.

3. Deleting Files

Enter into the main menu mode by pressing in the “◀MODE ▶” toggle/button then sort through to DEL. Press the in “◀MODE ▶” toggle/button again to select DEL. You are now in the delete file options.

In the DEL menu, you can select the files that you want to delete. Press in the “◀MODE ▶” toggle/button to select the specific file that you want to delete. Then press in the “◀MODE ▶” toggle/button again to confirm deletion.

4. Setting of the Player

Press in the “◀MODE ▶” toggle/button to enter the SETTINGS menu on the player.

In this menu, you can select each of the options by using the “◀/▶” toggle, then press in the “◀MODE ▶” toggle/button again to confirm selection.

4.1 Under Equalizer Settings mode

Scroll through the options by using the “◀/▶” toggle to change the sound effect mode to be set for the current song, and press in the “◀MODE ▶” toggle/button to confirm and return to the upper menu.

4.2 Under Playing mode

You can choose different music recycle modes by scroll through the options by using the “◀/▶” toggle. Then when the desired choice is shown in the display, push in the “◀MODE ▶” toggle/button to select the mode.

4.3 Under Contrast mode

Use the “◀/▶” toggle to adjust the brightness display. To confirm selection and return to upper menu press in the “◀MODE ▶” toggle/button.

4.4 Under Backlight setting

This function allows you to set the time of the background light from 00 to 60 seconds. Use the “⏪/⏩” toggle to change the time. To confirm selection and return to upper menu press in the “⏪MODE ⏩” toggle/button.

4.5 Power off setting

This option allows the user to set the duration of time after which the player will automatically turn its self off if left idle. The following choices are provided: disabled, 1 minute, 2 minutes, 5 minutes and 10 minutes.

Disabled: Under stop status, the player will stay at stop status without automatic turning off unless the Turn off button is pressed.

x minutes: Under stop status, if there is no other button pressed, the player will be automatically powered off after x minutes, the player will turn itself off to conserve power.

Use the “⏪/⏩” toggle to change the time. To confirm selection and return to upper menu press in the “⏪MODE ⏩” toggle/button.

4.6 Under Record setting

Use the “⏪/⏩” toggle to select the options, then press in the “⏪MODE ⏩” toggle/button to confirm and set the selected option. Select Exit option and press “⏪MODE ⏩” toggle/button in to return to upper menu. The record settings are as follows (the higher the rate the more memory is used, the lower the rate the longer the recording):

Source	MIC		
Encoder	MS ADPCM	PCM	IN ADPCM
Channels	MONO		
Device	Internal		
Rate	32000HZ 48000HZ 11025HZ 22050HZ	44100HZ 8000HZ 16000HZ	
Exit			

4.7 Language

Change languages shown on the player.

5. About

From the main menu you can enter the “About” screen which shows information about player memory and components.

Features

A-B Repeat

The A-B feature allows the listener to select a specific portion of the audio to repeat. Under file playing (music or voice) status, press “A-B Repeat/REC” button and A- will appear at the top left corner of the LCD. Press the “A-B Repeat/REC” button again to signal when to end the portion of audio which will be repeated. Look for A-B to appear in the top left corner of the LCD screen. The player will repeat this section until the A-B button is pressed again to clear the selection.

FM Radio Reception

Press in the “MODE” toggle/button while player is in STOP status and enter FM mode. Under radio reception mode, press in the “MODE” toggle/button to operate channel searching, channel saving, recording, radio receiving and exiting.

(1) You can conduct manual or automatic channel searching. Using “MODE” toggle to change the frequency manually or press “PLAY” to automatically search the frequency range from FM 87.6 to 108.

(2) To save the channels detected, press in the “MODE” toggle/button and then press “PLAY” button. Even after the player is turned off saved stations will remain stored in memory.

Note: To make the preset channels changes permanent, be sure to turn off the player according to the normal procedure.

(3) To conduct Live FM Recording enter radio mode and press “REC” button. Press the “REC” button again to stop the recording.

(4) You can always jump between Radio mode and other listening modes.

Line-In Function

The line-in function allows direct digital recording from any other audio device with an earphone jack. For example you can record directly from your CD player or stereo.

- (1) While player is in Stop status, go into the main menu and choose Setting menu.
- (2) From the setting menu choose “Recordset” by pressing down the “MODE” button.
- (3) In the Recordset screen the first option is “source.” In order to use the line in recording make sure that the source is set to Line In.
- (4) Press the play button twice to get back to the main menu.
- (5) From the main menu select Record by pressing in the “MODE” button while Record is highlighted.
- (6) Recording will start automatically.
- (7) To stop recording press in the “MODE” button. To pause recording press the “PLAY” button.

USB connection

1. Connect the USB port of the player to the computer through USB plug or data cable.

2. After connecting the USB port, press “◀MODE▶” toggle/button and a symbol of connection will appear on the player.

Note: If you are using Win XP or Mac OS x or newer, there is no need to install any drivers.

File transmission

When connected to the computer the MP3 player will appear as “removable disk.” The upload/download of content is very simple. Open the file “removable disk” and drag whatever files you want to store on the player into the “removable disk” window, and drop them in the “removable disk” window. All files that are dropped in the “removable disk” window will now be on the player.

Formatting the player

If you choose to format the player use the “FAT” setting.

Technical Specifications

Memory Capacity	128M/256M/512/1GB(inside)
Size	88m X28mmX15mm
LCD	96X26Dot Matrix
Power	Built-in chargeable lithium battery
Memory	Built -in flash memory
Music	MP3、WMA、WAV
Fm radio	87.5~108MHz
Zip speed support	32kbps-32kbps
Earphone output	5mw+5mw
Signal/Noise Radio	90dB