



Instruction Manual

Tech Lock (XCA-TL1)
Notebook Computer Lock

1. The preset passcode on your Tech Lock (XCA-TL1) is '0000'



Numeric Combination Code


2. To customize the numeric passcode:
 - a. Set the passcode to '0000' or whatever it is currently set to
 - b. Press down on the passcode reset button



Passcode Reset Button

- c. Reconfigure the code to whatever number you want to use as the new passcode
- d. Release the passcode reset button
- e. The new passcode is now set to the 4 digit code you chose before releasing the passcode reset button

3. To attach the Tech Lock to a notebook computer you must:
- Find the security lock slot
 - Press on the 'release button'

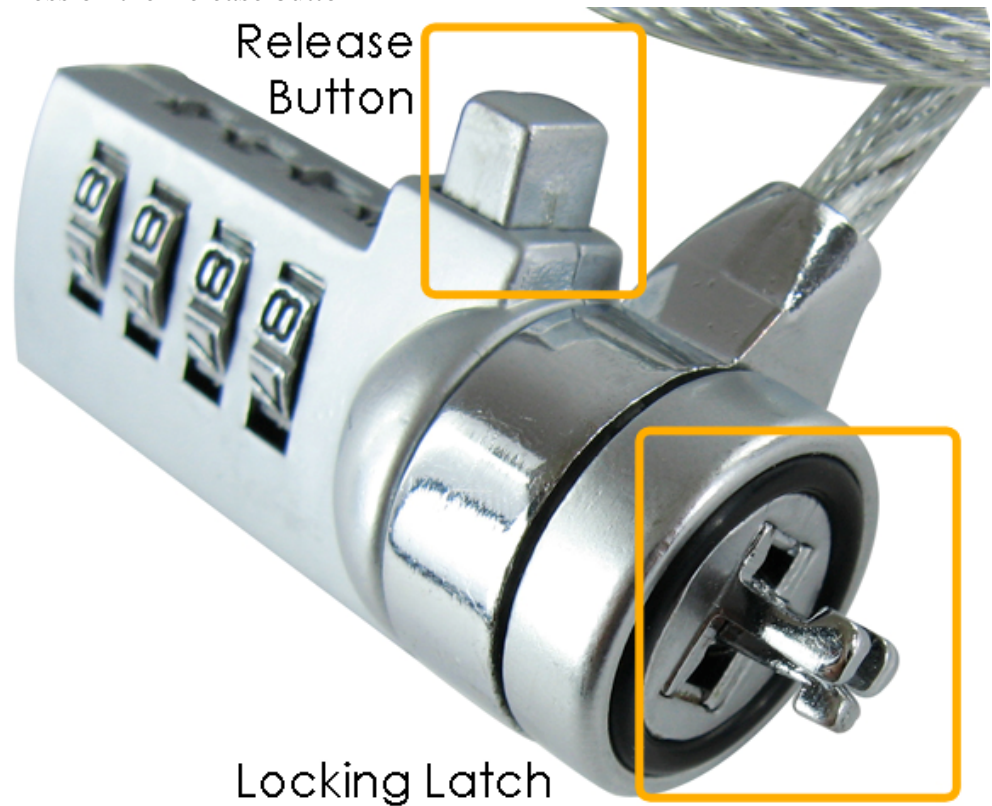

- Insert the 'locking latch' into the security lock slot and lift up on the 'release button'